


HOW TO SPECIFY A SPECIAL RIB LOCATION FOR METAL BUILDING CURBS

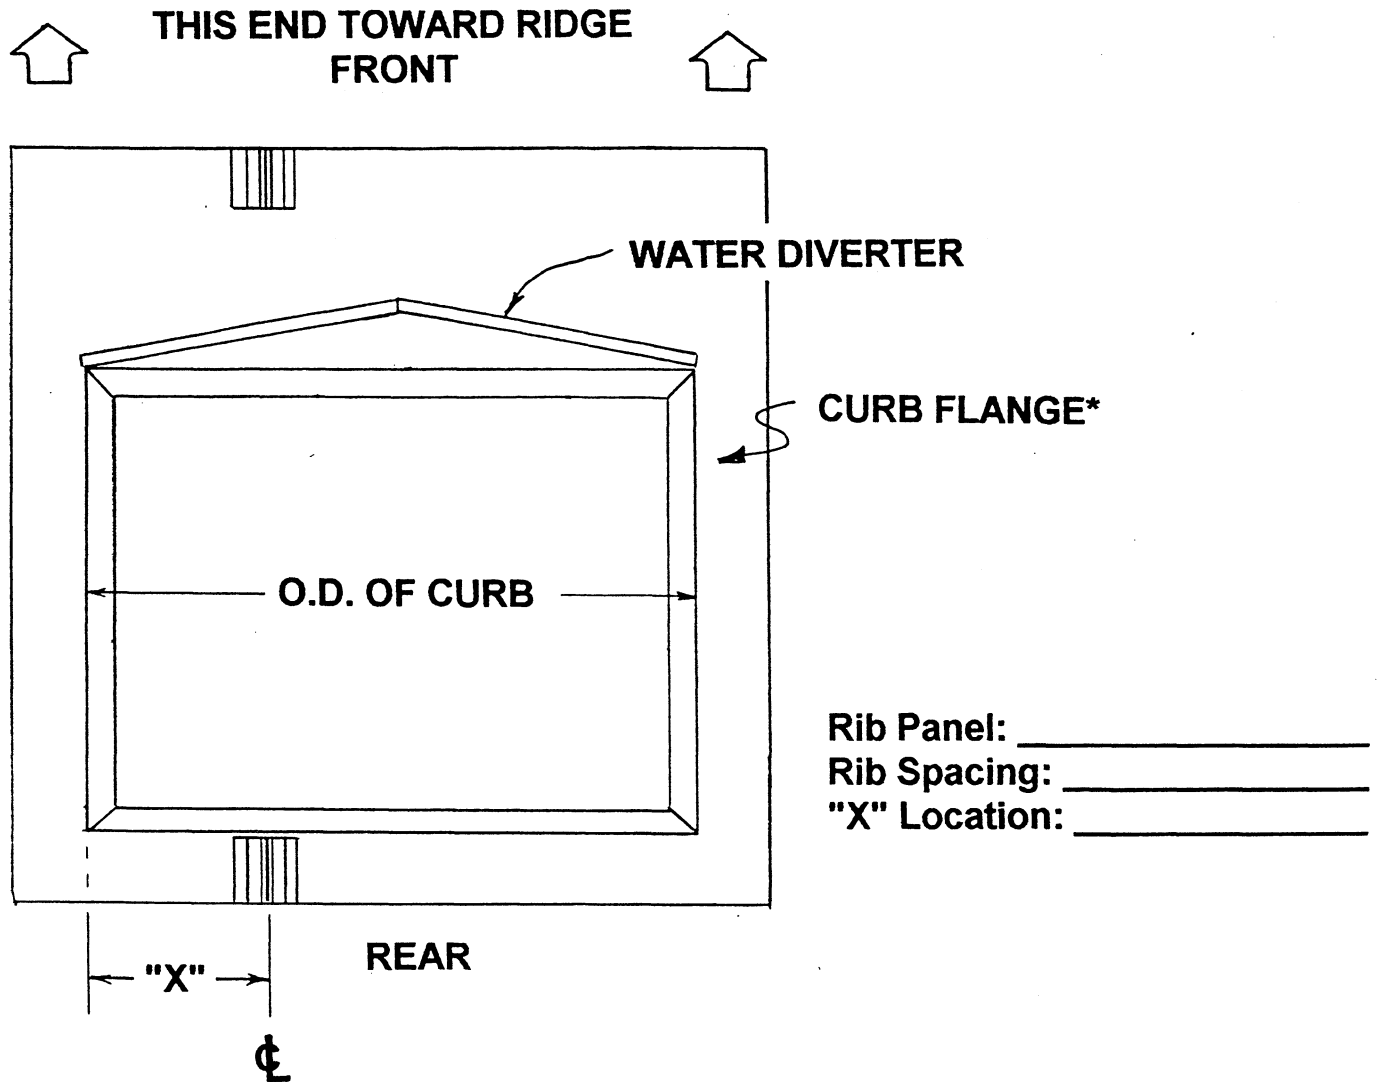

- (1) With the water diverter facing uphill, toward the ridge of the building, measure from the left hand side of the curb (O.D. of the curb, do not include the flange) to where the centerline of the rib needs to be located.
- (2) Provide the Rib Panel and Model.
- (3) Provide the rib spacing -- 12", 16", 24" etc.

Note: There is a 10% add to the curb price for special rib location

***Flange size may vary to accommodate rib locations**

SPRIBLOC-9-1995